


LINEA-4R




MNLINEA-4R

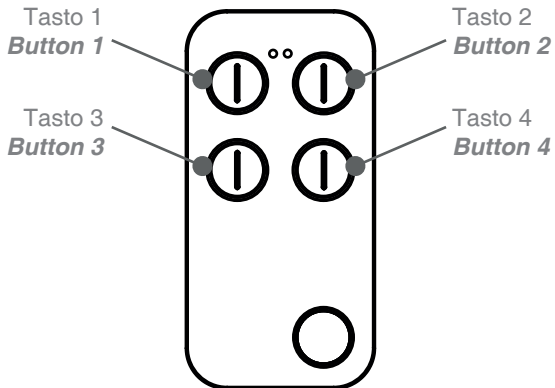

Radiocomando rolling code 433,92MHz, 4 tasti con funzione impostabile.

Rolling code remote control, 4 buttons with settable function

SOSTITUZIONE DELLA BATTERIA BATTERY REPLACEMENT

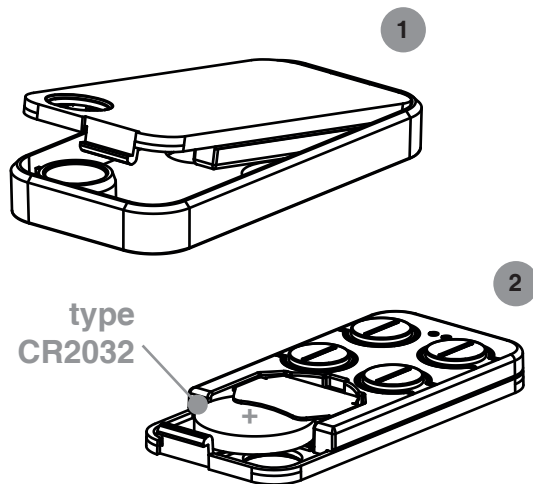

DATI TECNICI

Alimentazione	Batteria CR2032
Codifica	Rolling code

Frequenza radio	433,92MHz
Portata	100m (nominali)

PROGRAMMAZIONE DEL TRASMETTITORE CON ACCESSO ALLA RICEVENTE

Requisiti: avere accesso ai tasti di programmazione della ricevente

- 1- Attivare la ricevente sulla quale si vuole utilizzare il trasmettitore in modalità "programmazione radio di trasmettitori generici" e selezionare la funzione che si desidera abbinare al tasto (vedi il manuale della ricevente)
- 2- Fare una pressione con il tasto che si desidera programmare, il led della ricevente emette tre lampeggi per segnalare l'avvenuta ricezione.

PROGRAMMAZIONE DEL TRASMETTITORE IN PROSSIMITA DELLA RICEVENTE

Requisiti: un trasmettitore già programmato / essere in prossimità della ricevente

- 1- Con il trasmettitore già programmato premere contemporaneamente i tasti 1 e 2 fino a che il led lampeggia (circa 3 sec).
- 2- Con il trasmettitore già programmato premere il tasto abbinato alla centrale di cui si desidera attivare l'ascolto
- 3- Con il trasmettitore "nuovo" fare una pressione con il tasto che si desidera programmare

TECHNICAL DATA

Power supply	CR2032 battery
Encoding	Rolling code

Radio frequency	433,92MHz
Range	100m (nominal)

TRANSMITTER PROGRAMMING WITH ACCESS TO RECEIVER

Requirements: have access to the recipient's programming keys

- 1- Activate the receiver on which you want to use the transmitter in "radio programming of generic transmitters" mode and select the function that you want to associate with the key (see receiver manual).
- 2- Press the desired key; the receiver's LED flashes three times to signal it has been received.

TRANSMITTER PROGRAMMING NEAR THE RECEIVER

Requirements: a transmitter already programmed / be near the receiver

- 1- With the programmed transmitter, press simultaneously buttons 1 and 2 of the transmitter until the led Flashes (about 3 sec.).
- 2- With the programmed transmitter, press the button associated with the control unit which you want to turn on the leaning
- 3- With the "new" transmitter, press the button you want to program